

MEKO

Mechanical Keyboard


User Manual




MEKO

Welcome to your meko Push.

Please charge before first use.

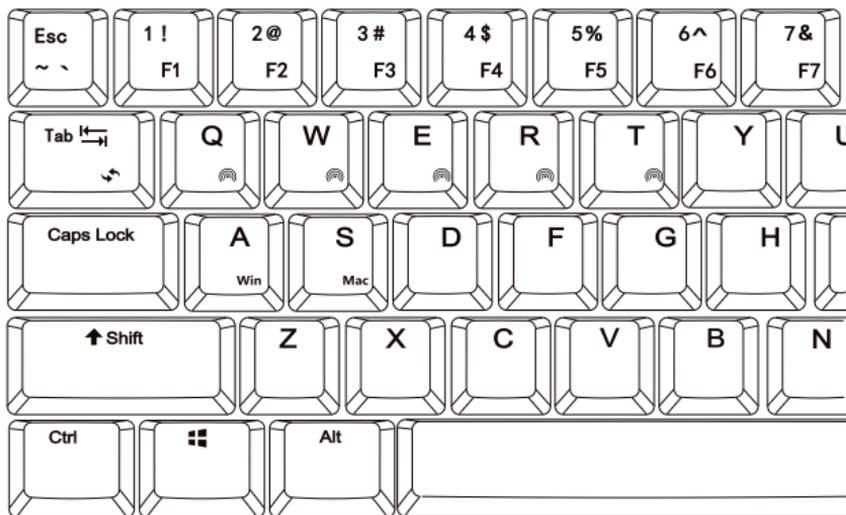

Dimensions	330 x 102 x 37mm
Keycaps	71 ABS Double Shot
Backlighting	SMD RGB LED
USB	Type C
Hotswap	Yes
Wireless / BT	Yes

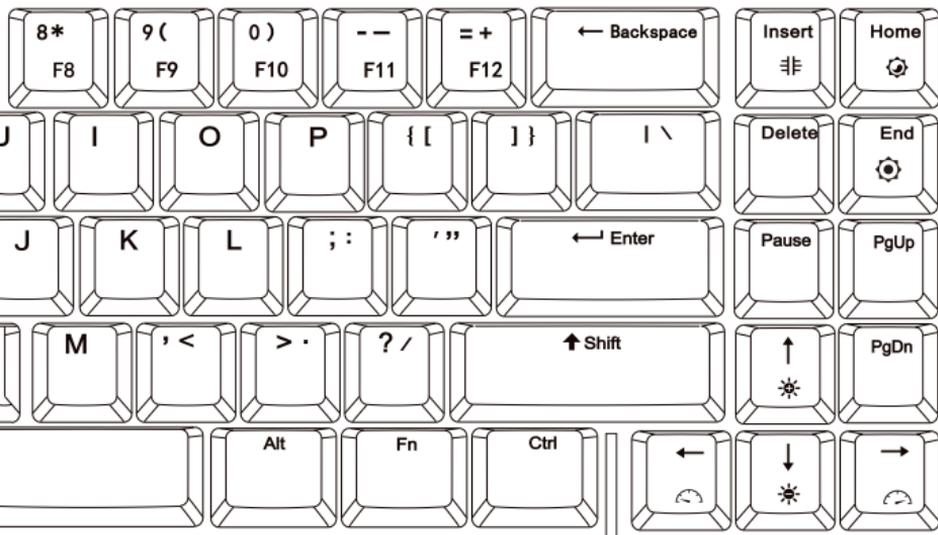

Supported Operating Systems


Windows XP - 10

Mac OS

Linux

iOS / Android

Special key functions

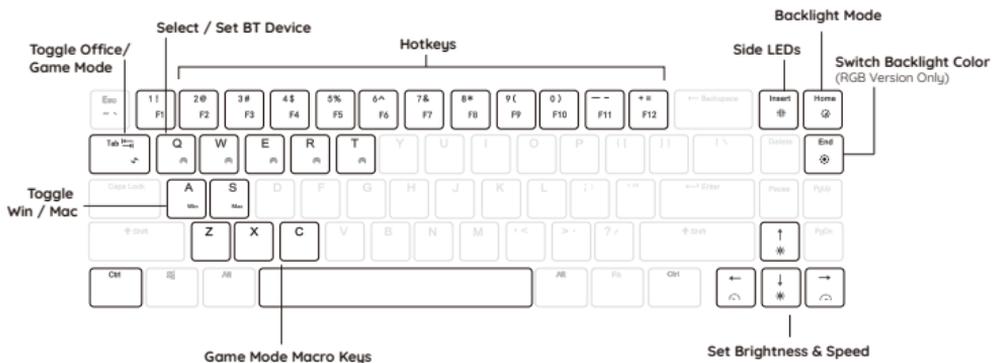

Dual System Support

Fn + A switch to Windows OS mode

Fn + S switch to Mac OS mode

	Win	Mac		Win	Mac		Win	Mac
Fn + 1	F1	☀	Fn + 7	F7	⏪	Fn + A	Win mode	
Fn + 2	F2	☀	Fn + 8	F8	⏩	Fn + S	Mac mode	
Fn + 3	F3	🗄	Fn + 9	F9	▶▶	Fn + Win	Lock win key	
Fn + 4	F4	🗄	Fn + 0	F10	◀	Fn + Home	Backlight mode	
Fn + 5	F5	—	Fn + -	F11	⏮	Fn + Insert	Side LEDs	
Fn + 6	F6	—	Fn + =	F12	🔊	Fn + z/x/c	Set macro key	
						Fn + Tab	Toggle office/ game mode	

Fn + Ctrl (left) Toggle F1-12 & Number function

Backlight Settings

Fn + Home	cycle through 17 backlight effects
Fn + Ins	cycle side LED effects / off
Fn + End	cycle backlight colors (RGB version only)
Fn + up	increase backlight brightness
Fn + down	decrease backlight brightness
Fn + left	decrease backlight speed
Fn + right	increase backlight speed

Bluetooth / USB

Press **Fn + P** to toggle between Wired and Bluetooth mode. The backlights will flicker to confirm mode change.

Ensure the power switch on the bottom of your push is in the **OFF** position when in wired mode and in the **ON** position when in wireless mode. Failure to do so will cause your Push to not work properly.

Your Push can store up to 5 Bluetooth devices at a time.

Switch BT Device FN + Q / W / E / R / T

Connecting Bluetooth devices

- 1) Make sure the power switch on the bottom of your Push is set to **ON**.
- 2) If you're not already in BT mode, press **Fn + P** to enter BT mode.
- 3) Press FN + your choice of Q, W, E, R, or T to select the profile you want to use for the device you're connecting.

Note: The backlights should flash after you make your selection. If they do not flash, you are likely not in Bluetooth mode. Repeat step 2.

- 4) Press and hold **Fn + P** for **3 seconds**. The P key will flash indicating you are in pairing mode.
- 5) On your Computer / Mobile device connect to the device named 'meko BT keyboard'. The P will stop flashing when a successful connection is made.

Game Mode and Macros

Fn + Tab toggles office / game mode. The backlights will flash. You can only record macros while in game mode.

Fn + z/x/c (hold for 3 seconds) enter macro recording mode

Fn + z/x/c (click) turn on/off the corresponding macro key

Setting Macros

- 1) Make sure you're in game mode (Fn + Tab)
- 2) Hold FN + your choice of Z, X, or C for 3 seconds. Caps and Win keys will continuously flash indicating you're in macro record mode. If these keys do not flash, repeat step 1 to ensure you're in game mode.
- 3) Enter the sequence of keys (up to 32) you would like the macro to trigger.
- 4) Hold FN + the macro key you selected for 3 seconds again to end recording. The Caps and Win keys will stop flashing.

Using Macros

- 1) Make sure you're in game mode (press Fn + Tab)
- 2) Click **z/x/c** to trigger the macro. If there is no response, you are likely in game mode. Repeat step 1 above to ensure you're in game mode.

Note: a macro key must be set (see: **Setting Macros**) before you can use it.

Other Settings

Fn + Space (hold for 3 seconds) resets your Push keyboard.

Fn + Win toggle lock/unlock windows key

Charging

- 1) The red backlight on the space bar will light up when charging.
- 2) Once fully charged, the red backlight will turn off.
- 3) If there is no operation for 60 seconds, backlighting will turn off automatically to save power. Press any key to wake up your Push.

Need more help?

mekokeyboards.com

MEKO